


MSO BIG FOOT INSTALLATION INSTRUCTIONS

1. INSERT AXLE INTO WELDED SHAFT NEAR REAR OF THE CART.
2. INSTALL TURF TIRE AS SHOWN AND APPLY CLIP AS SHOWN.
3. REPEAT STEP #2 ON OPPOSITE SIDE
4. INSTALL OUTRIGGER ON FRONT OF CART AS SHOWN USING PROVIDED HARDWARE.
5. ATTACH CASTER TO OUTRIGGER WITH INCLUDED HARDWARE
6. REPEAT STEP 4 AND 5 ON OPPOSITE SIDE OF CART.
7. CART WILL BE READY TO FINISH BY ADDING HANDLE,SHELF AND LEGS

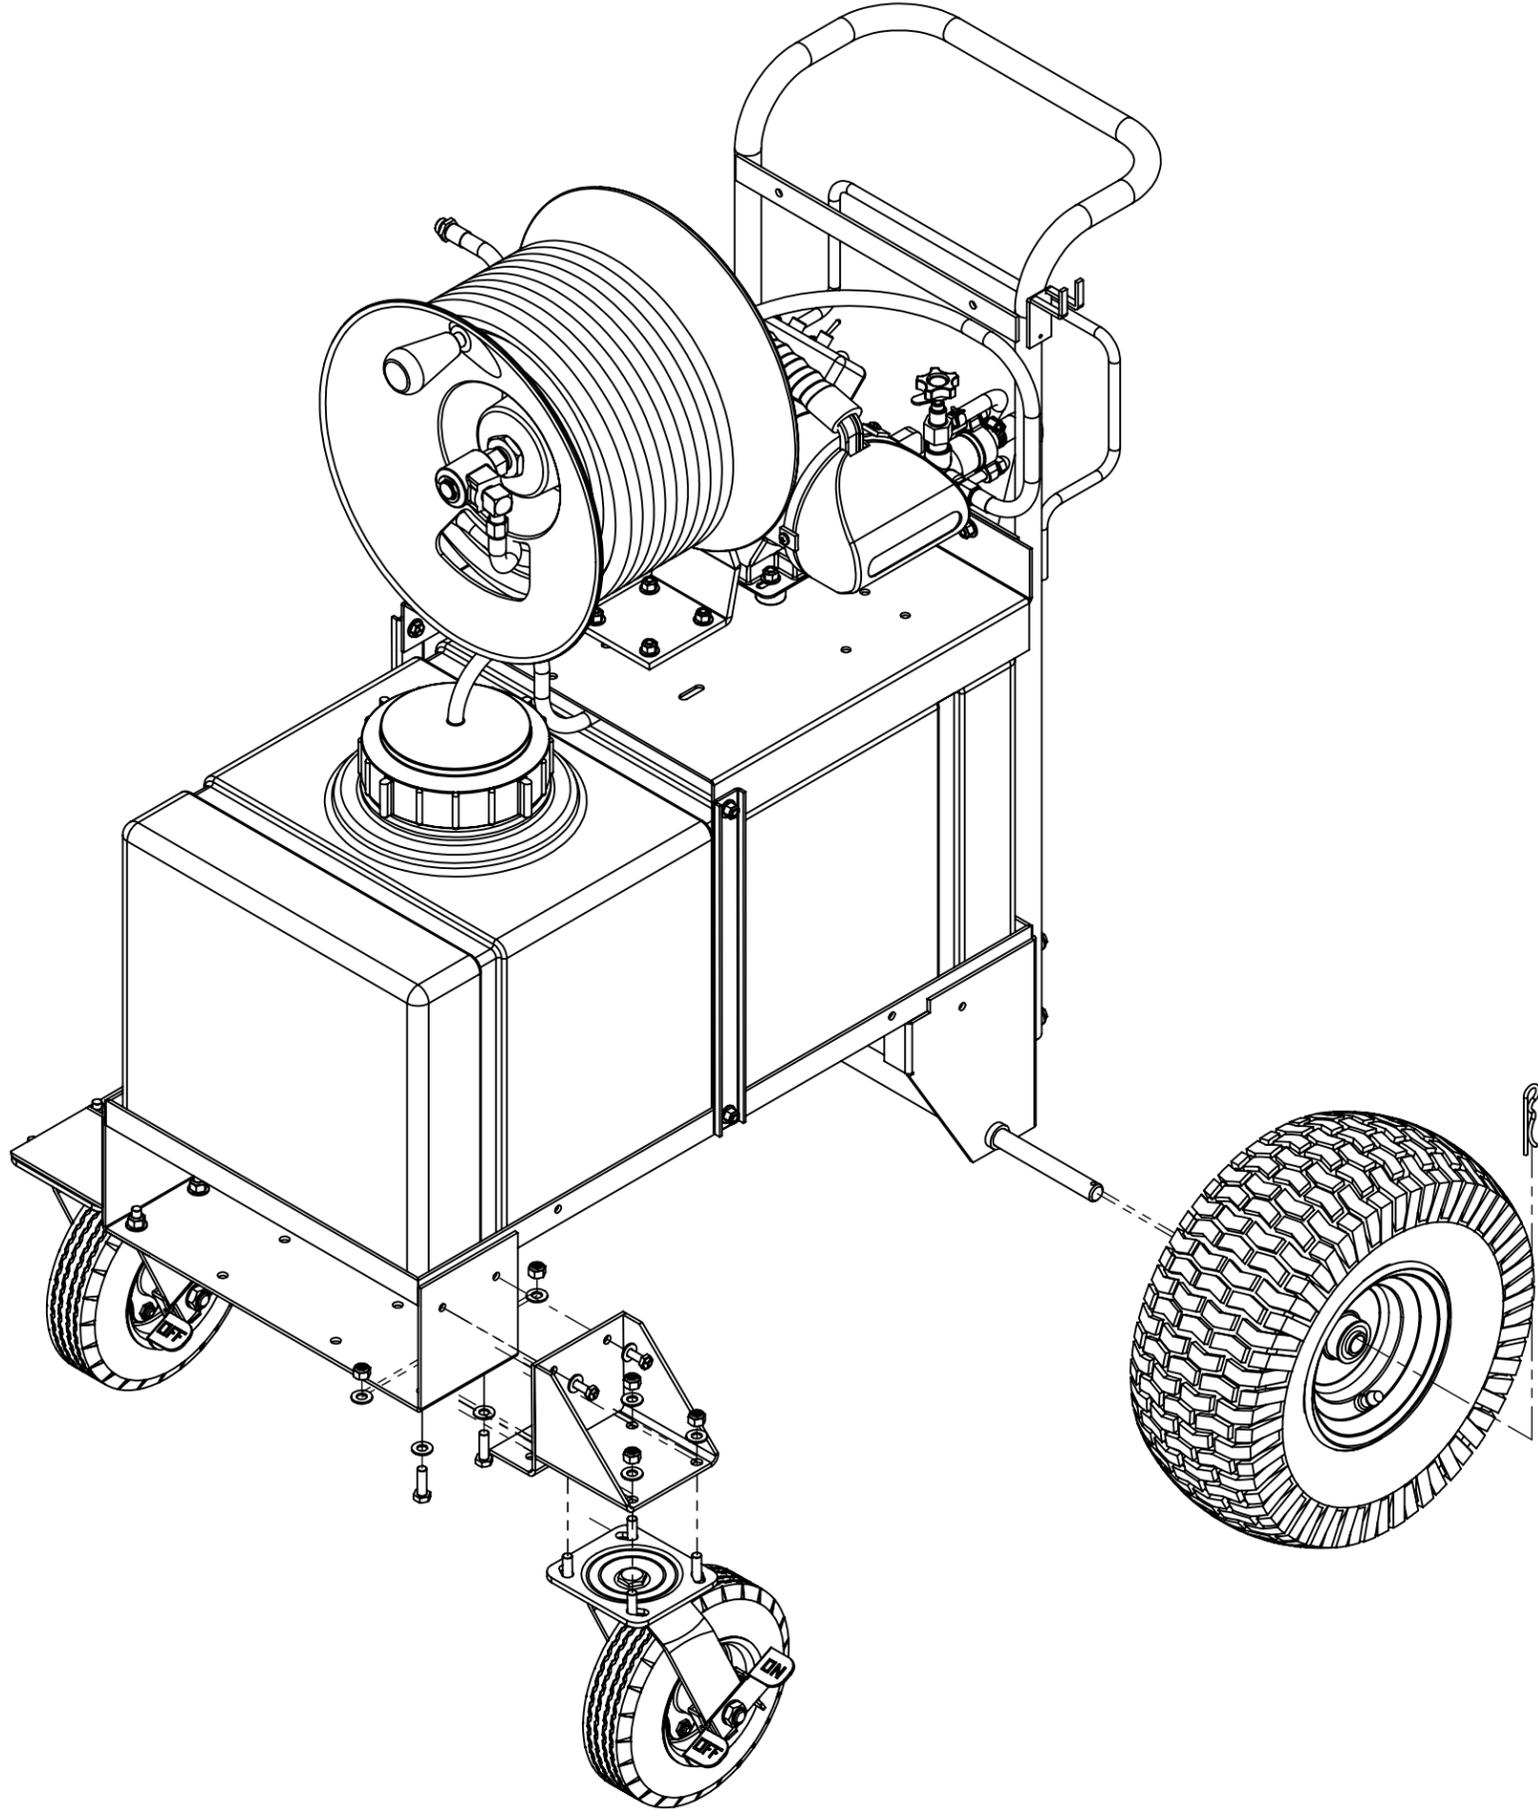

DRAMM
CORPORATION

2000 N 18th Street
P.O. Box 1960
Manitowoc, WI 54220
www.dramm.com

920-684-0227
800-258-0848
Fax:920-684-4499
information@dramm.com

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ARE:
.X = +/- 0.05 ⊕ = +/- .005
.XX = +/- 0.015 TIR = +/- .010
.XXX = +/- 0.005 ∠ = +/- 3°
.XXXX = +/- .001 ○ = +/- .004

TITLE		PROJECT		MATERIAL		FINISH	
				ASSEMBLY			
APPROVALS	DATE	SIZE	DOC NO.	REV.			
DRAWN LBB	8-5-11	B	MS20-100-BF	1.0.0			
CHECKED -	-	SCALE	CAD FILE:	SHEET		OF	
RESP ENG -	-	1:6	MS20-100-BF	2		2	